
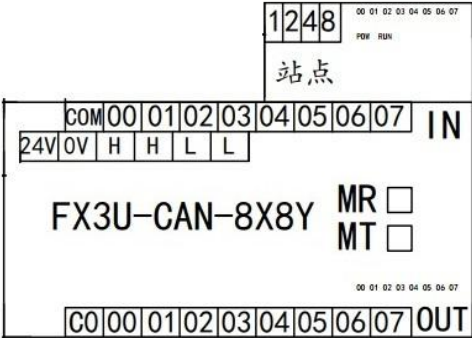
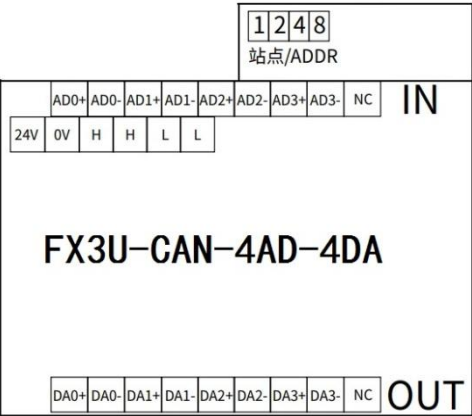


FX3U-CAN-8X8Y/16X/16Y/4AD-4DA

使用说明书

一、外观尺寸及端子定义

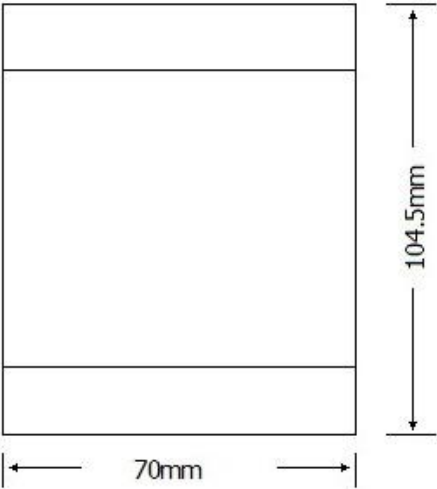

二、地址拨码及通道定义

2.1 CAN地址拨码

CAN 地址	拨码开关位置				图片	适用模块
	SW4	SW3	SW2	SW1		
11	OFF	OFF	ON	OFF		8X8Y
12	ON	ON	OFF	OFF		8X8Y
13	OFF	ON	OFF	OFF		16X或16Y
14	ON	OFF	OFF	OFF		16X或16Y
0	ON	ON	ON	ON		4AD或 4AD-4DA
1	OFF	ON	ON	ON		4AD或 4AD-4DA
2	ON	OFF	ON	ON		4AD或 4AD-4DA

2.2 通道地址定义


扩展模块	地址	定义
FX3U-CAN-8X8Y	11或12	站11: X100-X107,Y100-Y107
		站12: X110-X117,Y110-Y117
FX3U-CAN-16X	13或14	站13: X120-X137
		站14: X140-X157
FX3U-CAN-16Y	13或14	站13: Y120-Y137
		站14: Y140-Y157
FX3U-CAN-4AD	0或1或2	站0: D7100-D7103
		站1: D7110-D7113
		站2: D7120-D7123
FX3U-CAN-4AD-4DA	0或1或2	站0: AD: D7100-D7103 DA: D7104-D7107
		站1: AD: D7110-D7113 DA: D7114-D7117
		站2: AD: D7120-D7123 DA: D7124-D7127

关于模拟量编程提示：
AD：0~10V (0~20mA) 信号输入对应0~4095
DA：0~4095对应0~10V输出

三、终端电阻
CAN总线两端需要接终端电阻120Ω。
可提高数据通讯的抗干扰性和可靠性。

接线如右图

注意：本公司的
PLC，内部已有
120Ω终端电阻，
无需在外部接线

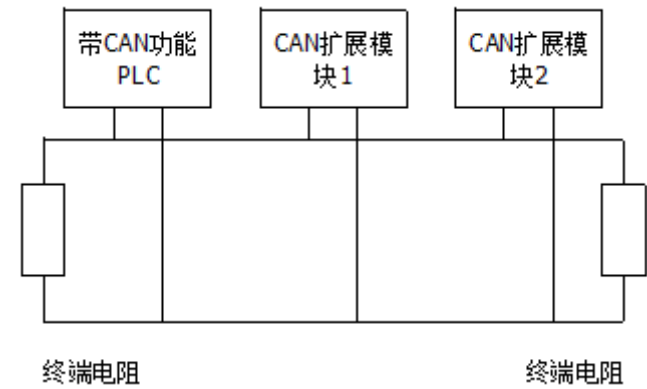

CAN扩展模块的终端电阻接线如右图

其它型号接线类似

